



Traffic Safety Corporation
 2708 47th Ave.
 Sacramento, CA 95822-3806
 Toll Free: 888.446.9255
 Tel: 916.394.9884
 Email: sales@xwalk.com
 Web: www.xwalk.com

TS-SR-CITY-BALI Flexible Bollard

Features

- Flexible bollard bounces back and returns to original position after impacts.
- Ideal for urban area delimitation.
- Available in two diameters: 3.15" (80mm) and 5.12" (130mm).
- Resistant to traffic vehicles.
- UV protection for greater durability.
- 3M reflective tape with high reflectivity for greater visibility at night.
- Reflective bands with two rows of glass elements on top and base.
- Cost effective alternative to traditional cast iron bollards.
- Easy installation and low maintenance costs.
- Other colors and sizes available.



Mechanical Features

- Main Body/Base Material: PU
- Mounting Screw: Galvanized Steel
- Anchor Material: Aluminum
- Main Body/Base Colors: Anthracite Grey (RAL 7016)(other colors available by request)
- Reflective Tape: 3M Reflective Tape
- Reflective Tape Colors: White or Yellow
- Reflective Bands with Glass Elements: Black with white crystals.



Bollards

	TS-SR-CITY-BALI-800/80	TS-SR-CITY-BALI-800/130
Height	31.5" (800mm)	31.5" (800mm)
Diameter on Top	3.15" (80mm)	5.12" (130mm)
Diameter on Base	3.94" (100mm)	6.38" (162mm)
Weight	4.41 lb. (2 Kg)	7.39 lb. (3.350 Kg)

Other dimensions available by request

Anchor

	TS-SR-A6050
Height	2.36" (60mm)
Diameter	1.97" (50mm)
Material	Aluminum
Weight	.37 lb. (0.166 Kg)



Reflective band with two rows of glass elements.


Visit our web site: www.xwalk.com



Traffic Safety Corporation
2708 47th Ave.
Sacramento, CA 95822-3806
Toll Free: 888.446.9255
Tel: 916.394.9884
Email: sales@xwalk.com
Web: www.xwalk.com

TS-SR-CITY-BALI Flexible Bollard

Dimensions (mm)

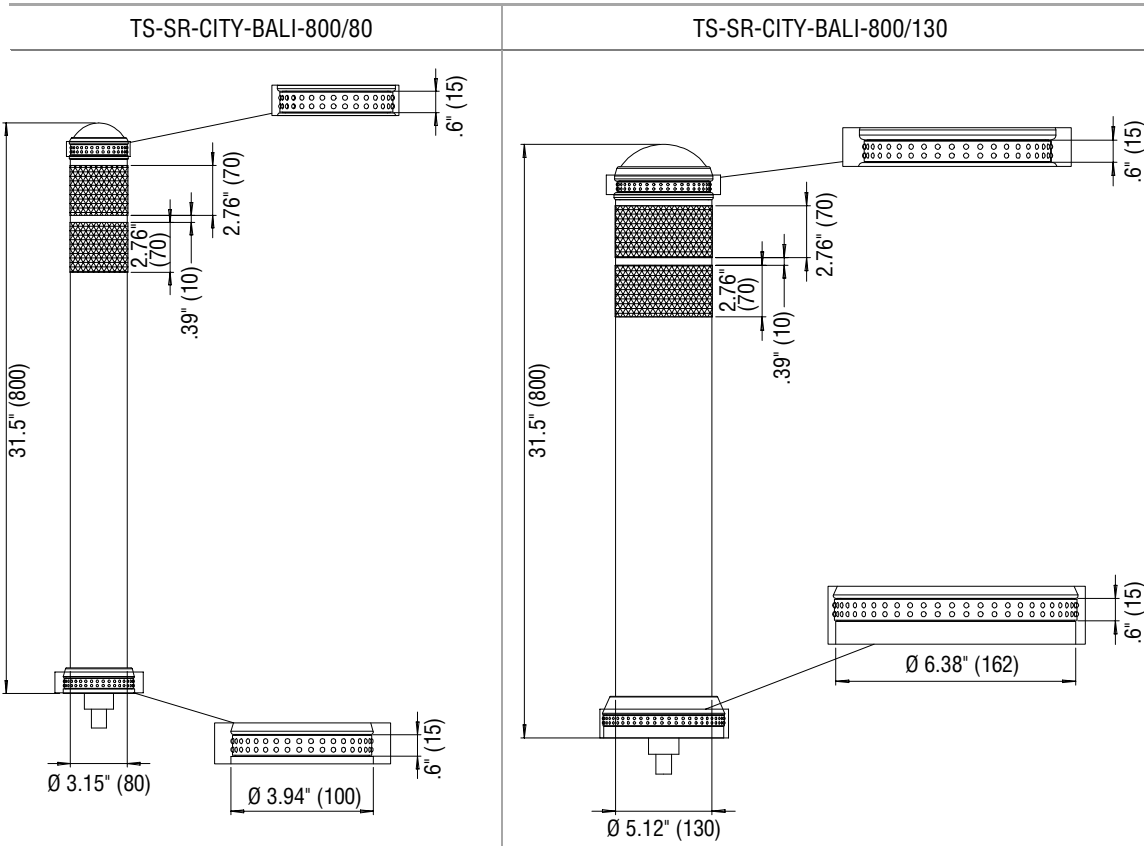

Visit our web site: www.xwalk.com




Traffic Safety Corporation
2708 47th Ave.
Sacramento, CA 95822-3806
Toll Free: 888.446.9255
Tel: 916.394.9884
Email: sales@xwalk.com
Web: www.xwalk.com

TS-SR-CITY-BALI Flexible Bollard

Installation Procedure



Personal protective equipment must be worn during installation process.

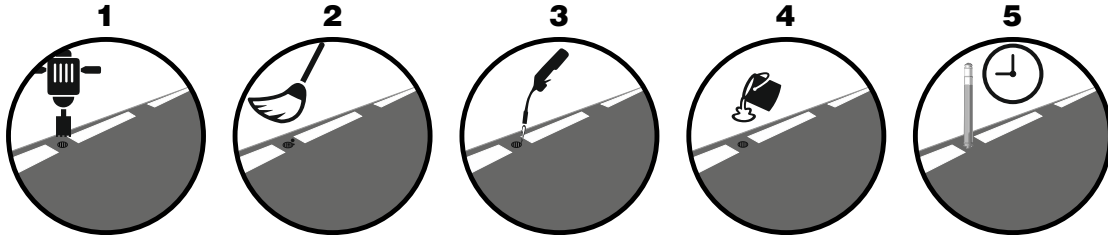

- 1** Drill a hole with 2.36" (60mm) diameter and 2.76" (70mm) depth.
- 2** Brush any debris or dust from the hole resulting from drilling.
- 3** Dry the hole with a blowtorch to remove any moisture that may compromise the adhesion and effectiveness of the glue.
- 4** Pour glue in the hole and insert the TS-SR-BALI. Remove any excess remaining of glue.
Recommended glues: PATTEX TQ 500, Hilti HIT-HY 150 or Sika AnchorFix®-1
- 5** The glue drying time may change depending on weather conditions.
Consult the glue data sheet for more information.

Changing or not completing the described installation process can result in suspension of warranty.

Visit our web site: www.xwalk.com